
WATER WATCH INSTALLATION INSTRUCTIONS (BATTERY)

Please read these instructions carefully


Description of Operation

The valve controls the water supply to the cistern and is electrically operated by the Water Watch controller. The controller detects individuals using the urinals. A flush cycle starts with a detection followed by a delay (20min default) set by the installer and then followed by a flush. At the end of a cycle the controller waits for a further detection before the next flush cycle commences. If a period of 24 hours (or 12 hrs) elapses without detection a flush will occur.

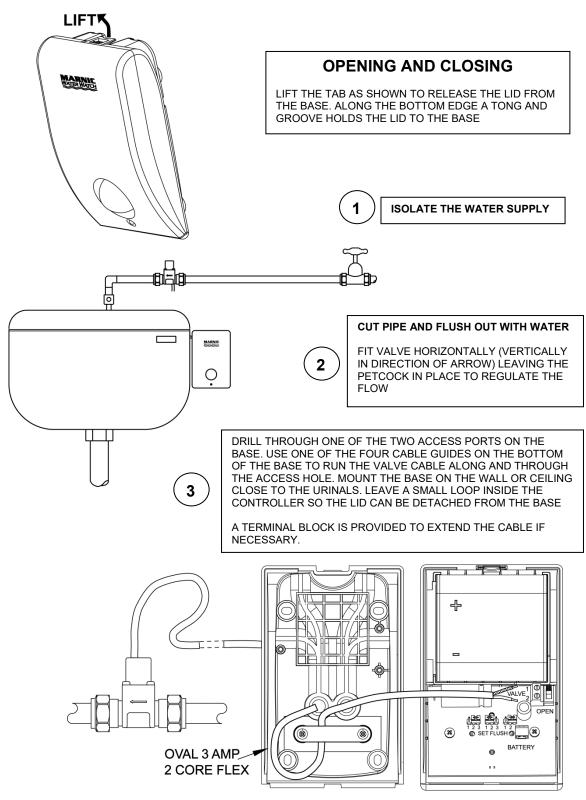



CONNECT THE BATTERY THEN FOLLOW THE THREE STEPS BELOW TO SETUP THE WATER WATCH

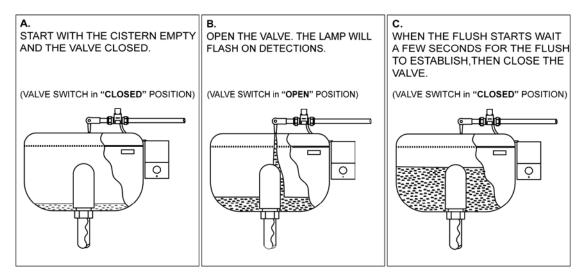

THE TIME TAKEN FOR THE CISTERN TO FILL IS STORED IN MEMORY AND USED ON ALL SUBSEQUENT AUTOMATIC FLUSHES.


ONLY FILL TIMES GREATER THAN 1 MIN. ARE SAVED

THE WATER WATCH IS NOW FULLY OPERATIONAL. CLOSE THE LID. IF THE LAMP IS FLASHING CHECK THAT THE SWITCH IS IN THE CORRECT "CLOSED" POSITION.

THE SWITCH MUST NEVER BE LEFT IN THE "OPEN" POSITION.

THE LAMP WILL NOW ONLY OPERATE WHEN THE BATTERY NEEDS CHANGING.

CHANGING THE FLUSH SETTINGS

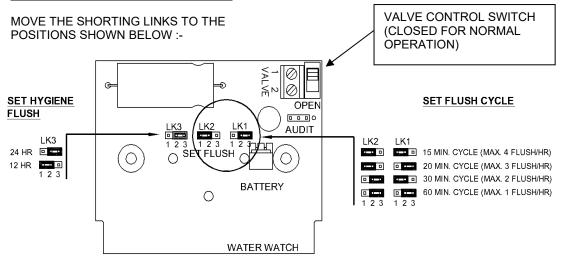

Designed & Manufactured in the UK by :- Marnic Technology Ltd

P O Box 279, Cheadle, Cheshire, SK8 7DE Tel: 0161 485 1024, Fax: 0870 838 1038 E-Mail: sales@marnictechnology.co.uk

www.waterwatch.co.uk



Model No. WW101/B